

GB Operating Instructions

WA-EKF 3047/S:MMS/D:Ko/80.10.0737.7

1. Putting into operation


Electrical units may only be installed and assembled by a skilled electrician. (The term "skilled electrician" is defined in VDE 0105).

Notes:
The unit contains well-designed electronic components which are largely protected against external interference. However, it must be remembered that extremely high interference voltage peaks can be superimposed on the mains voltage, depending on the installation site. Interference which, despite all internal protective measures, can also effect an electronic unit also arises when contactors are switched. In order to guarantee the greatest possible operational reliability, the following details must be observed:

- In the case of larger systems, a suitable varistor or RC element must be used to provide interference suppression for contactor coils directly switched by the time switch.
- If inductive direct current loads are switched, a suppressor diode must be installed.
- Inductive loads and particularly fluorescent lamps place particular demands on the output contacts. In each individual case, check whether it is appropriate to install an isolating relay or contactor.

2. Assembly and connection

Refer to the unit imprint/circuit diagram for connection details.

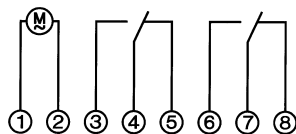


3 Operating the time switches

The steps marked with the symbol ► are necessary to carry out a switching program.

► 3.1 Reset

Press the **"Reset"** key with a pencil or similar object.
This sets the time switch to its basic setting.
– before every restart
– to delete all switching times and the time

The following appears after approximately 2 seconds:

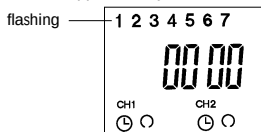

► 3.2 Entering the time and current day of the week

- After pressing the **"Res"** key (see 3.1):
- During the summer time period: press the **"±1h"** key once
- Keep the **"⌚"** key pressed during steps 4, 5 and 6.
- With the **"h+"** key: enter the hours
- With the **"m+"** key: enter the minutes
- With the **"Day"** key: enter the current day 1=Mo ... 7=Su
- Release the **"⌚"** key

The colon now flashes at one second intervals.

Note:
If the **"h+/m+"** keys are pressed for longer than 2 seconds, the display will enter fast-forward scroll mode.

► 3.3 Entering the switching times

42 memory locations are available.
Each switching time occupies 1 memory location.

- Keep pressing the **"Prog."** key until a free memory location "– : – –" is shown in the display.
- Select the switching functions **"☉"** (ON) or **"☾"** (OFF) with the **"🔌"** key for channel 1 or 2 (depending on the version).
- With the **"h+"** key: enter the hours
- With the **"m+"** key: enter the minutes

If a switching command is to be executed every day, proceed with step 6. If 1 switching command is to be executed only on one day or on certain days skip step 6 and continue with step 6.

- Save with the **"Prog."** key or
- With the **"Day"** key, select 1 day on which the switching command is not to be carried out (cursor flashes)
- Confirm this day with the **"Sel."** key (day of the week and cursor flash)
- Press the **"Day"** key (day is deselected).

Repeat steps 4, 7 and 8 for every day to be deselected.

- Save with the **"Prog."** key (the next free memory location is displayed)

or

- Save with the **"⌚"** key.

The time switch goes over to automatic mode and displays the current time.

Begin every additional switching time and the associated switching state **"☉"** = ON or **"☾"** = OFF again with 3.3.

Note:
If an input is incomplete, the segments still not selected are displayed flashing.

If you have deselected a day on which the switching command should be carried out,

- Reselect the deselected day with the **"Day"** key (day of the week and cursor flash).
- Confirm this day with **"Sel."** (cursor flashes).
- Press the **"Day"** key (day is reselected).
- Save with the **"Prog."** key (the next free memory location is displayed)

or

- Save with the **"⌚"** key.

3.4 Free channel block formation

The channels 1 and 2 or 1 or 2 can be assigned as required to every switching command **"☉"** or **"☾"**.

4. Additional functions

4.1 Manual summer time and winter time setting

- Press the **"±1h"** key once.

4.2 Automatic summer time / winter time changeover

The following 3 changeover variants are available:

AU (Automatic) = fixed changeover

The S/W time changeover is performed on the basis of a predefined calendar program which is permanently programmed up until the year 2079 and cannot be changed.
(Statutory summer time ruling of the European Union and Switzerland).

Start of summer time: Always the last Saturday in March.
The hour is advanced by one hour from 2 to 3.

End of summer time: Always the last Saturday in October.
The hour is moved back by one hour from 3 to 2.

cHA (calculated semi-automatic) = freely selectable changeover with weekday reference

You enter the valid summer time starting date for your country (e.g. date of the last Friday in April of the current calendar year) and also the date on which summer time ends (e.g. date of the first Tuesday in October of the current calendar year).

The program automatically assigns to this date the correct day of the week (in this case Friday and Tuesday).

In the subsequent years, the time changeover always takes place on the calculated day of the week, irrespective of the date (in this case the last Friday in April and the last Tuesday in October).

HA (semi-automatic) = freely selectable changeover with date reference

You enter the valid summer time starting and end dates for your country. In the subsequent years, the time changeover always takes place on the same date.


Activation of the automatic summer time / winter time changeover function

A requirement for the automatic S/W time changeover is, that the current date is entered.

If the time switch is set to AM/PM, the month is set with the key **"h+"** and the date is set with the key **"m+"**.

Entering the current date

Press the keys **"±1h"** and **"→Day"** once simultaneously.

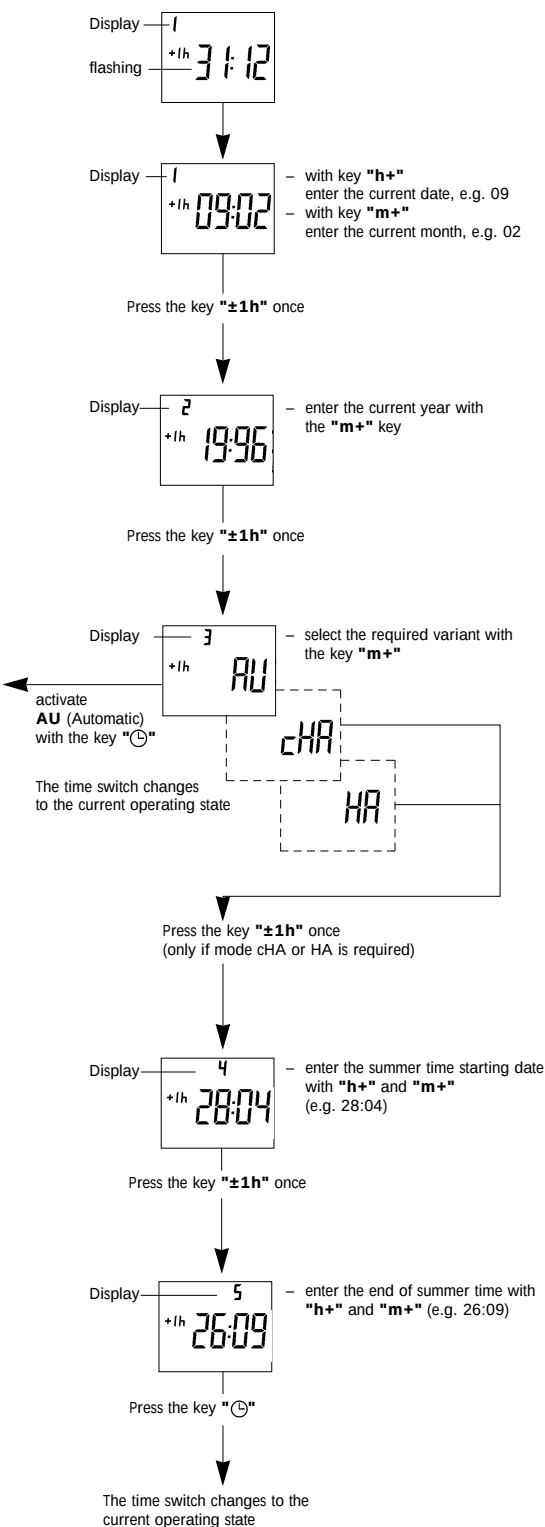

Reading the entered data

- Press the keys **"±1h"** and **"Day"** once simultaneously.
- Pressing the key **"±1h"** several times allows all entered data to be read in turn
- The key **"⌚"** allows you to return to the current operating state at any time.

Changing the entered data

Changes can only be carried out in the variants cHA and HA.

- Press the keys **"±1h"** and **"Day"** once simultaneously
- Press the key **"±1h"** twice
- Select the variant cHA or HA with the key **"m+"**
- Alter the changeover times as described in Figs. 1 to 5.

Deactivating the automatic S/W changeover function

- Press the keys **"±1h"** and **"Day"** once simultaneously.
- Press the key **"h+"** until **"– –"** appears (after the last day in the relevant month)
- Press the key **"⌚"**: The clock changes to the current operating state.

The S/W time changeover can then be performed either manually by pressing the key **"±1h"** once or new data can be entered as shown in Figs. 1 to 5.

4.3 Manual switch "🔌"

The current switching state can be changed at any time with the **"🔌"** key for channel 1 or 2 (depending on the version). Use of this manual override facility does not alter any of the programmed information.

Automatic Mode ⌚	Manual Mode 🔌	Continuous Operation 🔄 ⌚
⌚ ☉ = ON ⌚ ☾ = OFF	☾ 🔌 = OFF ☉ 🔌 = ON	🔄 = Continuous ON ⌚ = Continuous OFF
The switching times correspond to the entered program.	If the current switching state is changed manually, the next switching command is again executed automatically according to the entered switching program	You can only return to automatic mode from the 🔄 and ⌚ switching modes by pressing the 🔌 key.

4.4 Reading the programmed switching times

- Press the **"Prog."** key several times:
 - displays all entered switching times starting with the first memory location.
 - the first free memory location "– : – –" is then displayed.
 - the number of memory locations still free is then displayedIf the memory locations are occupied, the following appears in the display: **"FR 00"**
- Press the **"⌚"** key:

The time switch changes to automatic mode and displays the current time.

4.5 Changing the programmed switching times

- Keep pressing the **"Prog."** key until the switching time to be changed is displayed.
- The new data can then be entered as described in Point 3.3.

Note on saving switching times:
If programming is not completed with the **"⌚"** key after the switching time is entered (3.3), the complete switching command is still automatically saved after approximately 90 seconds. The time switch then changes to automatic mode and shows the current time again.

4.6 Deleting individual switching times

- Keep pressing the **"Prog."** key until the switching time to be deleted is displayed
- Set to **"– –"** with the **"h+"** or **"m+"** key and then press the **"⌚"** key for about three seconds.

The switching time is deleted and the current time is displayed after the key is released.

4.7 AM/PM time display

If the **"±1"** key and the **"h+"** key are pressed simultaneously, the time display is switched to AM/PM mode (used mainly in English-speaking countries).

5. Technical data

Connection	see unit imprint
Switching capacity	see unit imprint
Switching output	potential free
Contacts	1 or 2 changeover contact
Ambient temperature	–10 °C to +55 °C
Protection class (VDE 0633)	II
Accuracy	typ ± 2,5 sec./day at +20 °C
Running reserve	150 h at +20 °C
Full charge reached in	140 h at +20 °C (NC-accu)
Minimum switching time	1 min.
Programmable	every minute
Programming instructions	42
Manual switch	Automatic/Override FIX ON/FIX OFF
Block formation	free day and channel block formation automatical
Summer time/ winter time changeover	
Sealing	yes
Subject to modifications	